



---

# Account Registration and Log-In for the enCloud™ Management System

Encore Networks' cloud management system, enCloud™, provides management of your connected Encore devices via a web portal. Using a web browser, tablet, or smartphone, you can gain access to enCloud from anywhere. The enCloud management system manages Encore Networks' EN-1000™, EN-2000™, and EN-4000™ routers.

This document discusses procedures for a distributor representative to register an account with enCloud. It also provides the procedure for any user to log into enCloud.

In this document, see the following sections:

- If you are opening a new account for enCloud, follow the procedure in [Section 1.1, Account Registration](#), on page 1.
- To log into an existing account (that is, for an account that has already been opened), follow the procedure in [Account Log-In](#), on page 4.

**Note:** For a quick basic configuration, without details, see the [QuickStart Guide for the enCloud™ Management System](#).

See the following documents for additional information to set up your enCloud account:

- [Developing Accounts in the enCloud™ Management System](#).
- [Use Cases and Groups in the enCloud™ Management System](#)
- [Devices and Hardware Profiles in the enCloud™ Management System](#).
- [Establishing Users and Contacts for the enCloud™ Management System](#).
- [Developing Rules for the enCloud™ Management System](#)

## 1.1 Account Registration

**Note:** For an account that has already been opened), follow the procedure in [Account Log-In](#), on page 4.


To open a distributor account in enCloud, contact your Encore Networks sales representative. You will need to provide an administrative contact (yourself or another person) who will have principal administrative responsibility for the enCloud service. Provide

the e-mail address of the administrative contact; that address will be that person's initial log-in identifier for enCloud.

The remainder of this document is written as if you are that administrative contact: a distributor user with administrative access for the distributor account and for its customer accounts.

After providing your e-mail address, you (the administrative contact) will receive an e-mail message (similar to [Figure 1-1](#)) containing a URL for access to enCloud.

Figure 1-1. Account Registration Notice

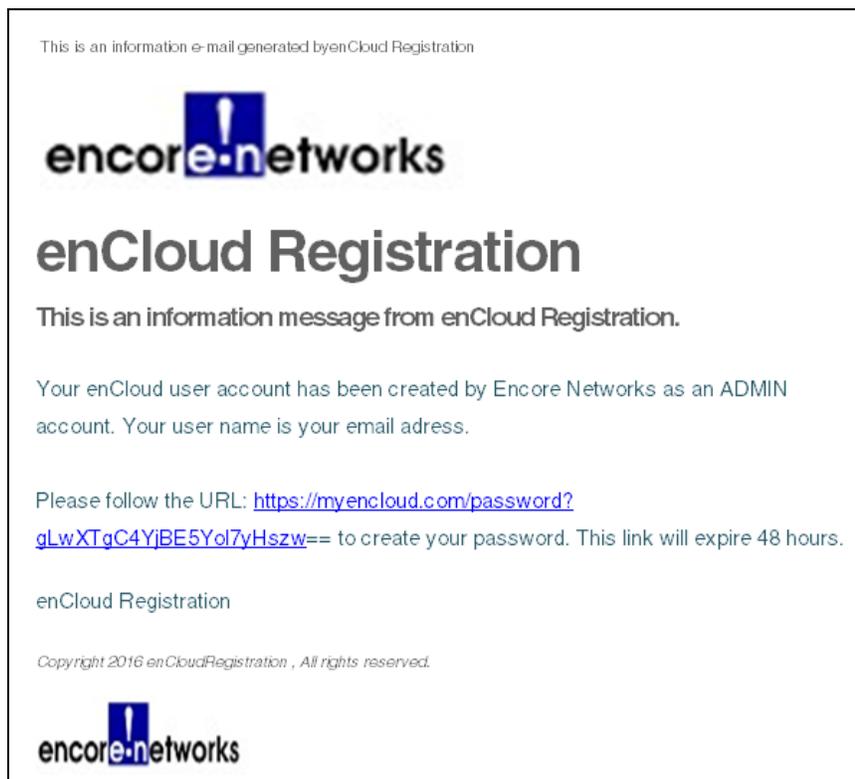

- 1 Open a web browser.

**Note:** Some browsers may not fully support the enCloud system. For best results, Encore Networks, Inc., recommends the Google Chrome browser.

Make sure Javascript is enabled, and make sure your browser does not block the enCloud pop-up window. (That is, check **Allow** if the browser asks to enable cookies.)


- 2 Copy the URL from the e-mail message to your web browser's address field.

**Caution:** The URL ends with two equal signs, ==. Some e-mail clients might not include those equal signs as part of the URL. If necessary, type the equal signs at the end of the URL in your browser's address field.

- 3 Press **Enter**.

» The enCloud Account Activation Screen is displayed ([Figure 1-2](#)).

Figure 1-2. enCloud Account Activation Screen

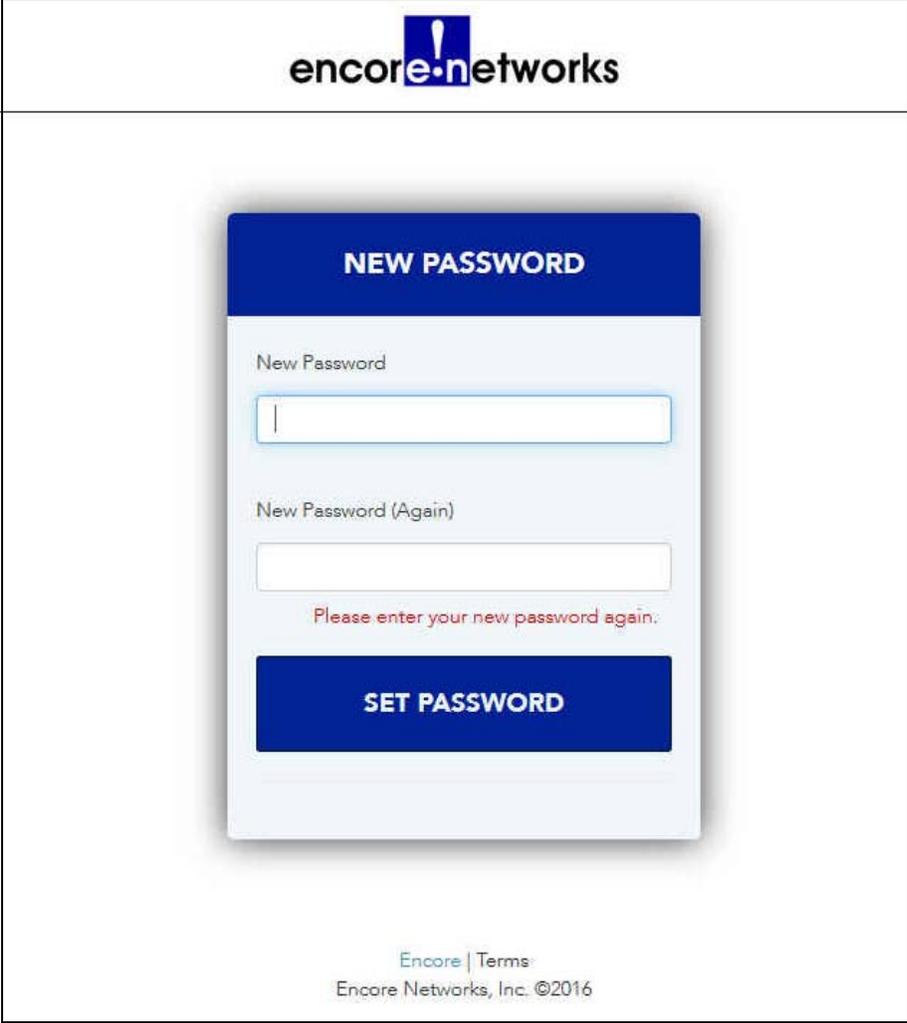

The screenshot displays the enCloud Account Activation Screen. At the top, the Encore Networks logo is visible. Below the logo, the screen is titled "NEW PASSWORD". There are two input fields: "New Password" and "New Password (Again)". A red error message, "Please enter your new password again.", is displayed below the second field. A blue "SET PASSWORD" button is located at the bottom of the form. At the very bottom of the screen, there is a link for "Encore | Terms" and the copyright notice "Encore Networks, Inc. ©2016".

- 4 In the **New Password** field, create a password. The password must conform to the following guidelines:
  - It must have eight or more characters.
  - It must include at least one capital letter (that is, an uppercase letter) and at least one small (lowercase) letter.
  - It must include at least one number.
  - It cannot include spaces or special characters.
- 5 Type that same password in the **New Password (Again)** field.

**Note:** The password entries must be identical, including use of letter cases. If the passwords do not match, the system will not accept the password.
- 6 Select the button to **Set Password**.
  - » When the password is accepted, the enCloud system opens, and your Table of Distributor Accounts is displayed (Figure 1-4, on page 5). The table provides an overview of your distributor account. Your user name and your access level are displayed in the upper right corner of the screen.
- 7 Continue to [Section 1.3, The Distributor Account](#), on page 5.

## 1.2 Account Log-In

Use the procedure in this section to log into an account that has already been opened.


**Note:** For the initial log-in to your account (that is, to open an account), follow the procedure in [Account Registration](#) on page 1.

- 1 Open a web browser, type <https://myencloud.com> into the browser window, and press the **Enter** key.

**Note:** Encore Networks, Inc., recommends use of the browser Google Chrome for access to enCloud.

» The enCloud Log-In Screen is displayed, requesting your log-in credentials ([Figure 1-3](#)).

Figure 1-3. enCloud Log-In Screen

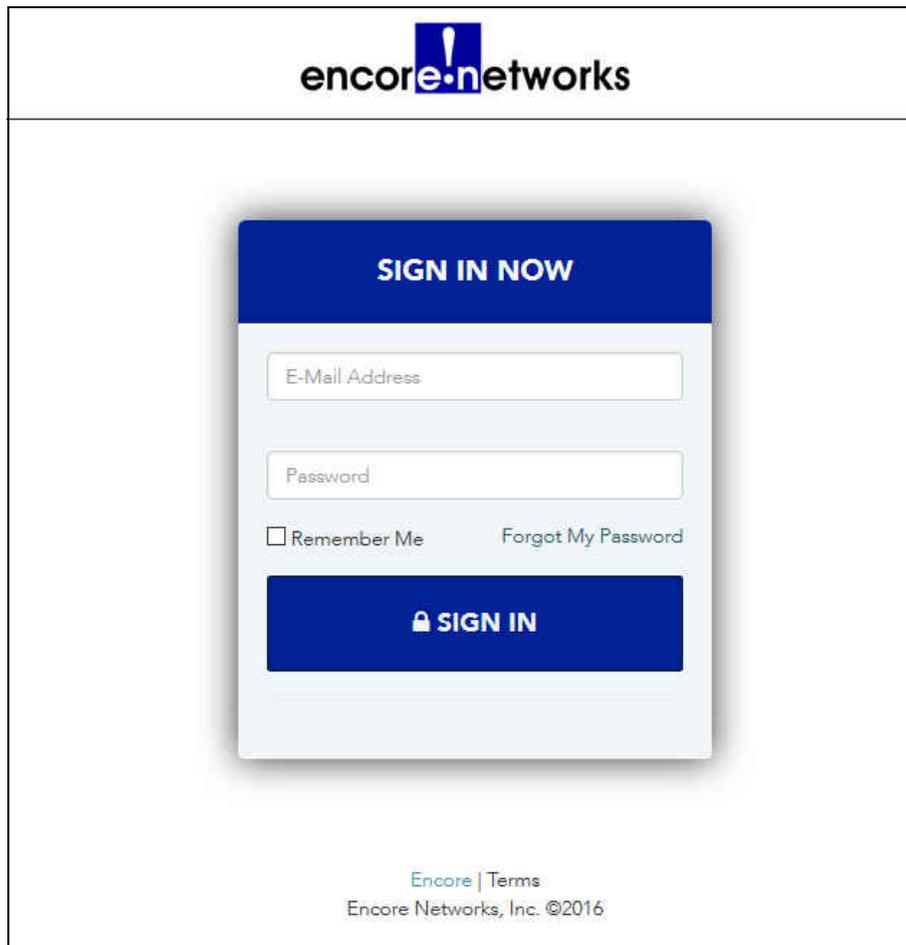

- 2 Use your browser to bookmark the URL for enCloud (<https://myencloud.com>).
- 3 Type your e-mail address. (Your e-mail address is your user identifier.)
- 4 Type the password you created in [step 4](#) (on page 3) of [Section 1.1, Account Registration](#), and select the button to **Sign In**.
  - » The enCloud system opens. Your Table of Distributor Accounts is displayed ([Figure 1-4](#)).
- 5 Continue to [Section 1.3, The Distributor Account](#), on page 5.

## 1.3 The Distributor Account

Figure 1-4. Table of Distributor Accounts

The screenshot shows the 'Distributors' page in the enCloud™ Management System. The page header includes the 'encore networks' logo and 'ENCORE NETWORKS' text. The user is logged in as 'Distributor User 1 [Admin]'. The left sidebar contains navigation options: Distributors, Customers, Devices, Rules, Events, Alerts, Users, and Help. The main content area shows a summary of distributor statistics:

Distributors	Distributor Devices	Customer Devices	Customers
1	6	0	1

Below the summary, there is a section for 'Actions for Selected Distributors' with a '+ Add New Distributor' button. A search bar and a '100 records per page' dropdown are also present. The main table of distributor accounts is as follows:

	Name	Description	Creation Date	Last Update Date	Total Customers	Total Users	Total Devices	
<input type="checkbox"/>	Distributor Acct 1	-	08/18/2016 11:00:25 AM	09/01/2016 2:41:30 PM	1	1	6	Actions -

At the bottom, it indicates 'Showing 1 to 1 of 1 entries' and includes pagination controls: '<< First', '< Previous', '1', 'Next >', and 'Last >>'.

**Note:** The Table of Distributor Accounts is usually the initial screen for a distributor user. To change the screen that displays after log-in, see the document [Settings for the enCloud™ Management System](#).

To develop your account, see the document [Developing Accounts in the enCloud™ Management System](#).

